



Veto HV Control

The Veto counters have to be switched to **REDUCED HV** during **Injection** and to **FULL HV** setting for **Luminosity** operation.

- Go to TOF/Veto Mac (B9R)
- Activate the application by clicking on windows '**MainWindow**' or '**Histograms**'
- Press and hold with mouse '**Control**' and select there '**VETO HV → Full**' to switch ON

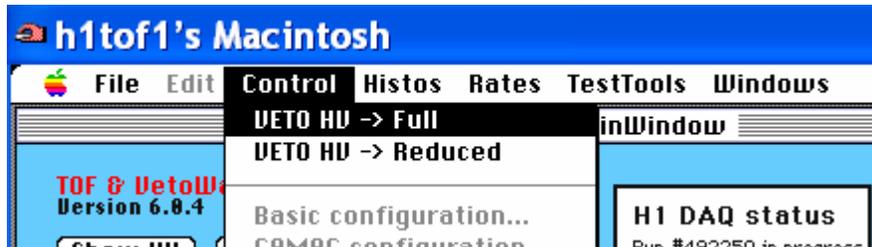

or '**VETO HV → Reduced**' for switching OFF

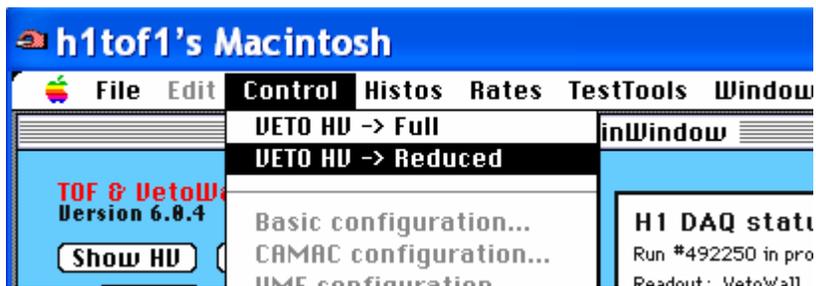

- it takes up to 20-30 sec until the new setting becomes active
- in case of problems call expert (V.Volchinski- 93086 or A.Bunyatyan- 94168)